## **INSTRUCTION MANUAL**



# WHITCOMB 45T SIDE ROD DIESEL ELECTRIC



### **ACCUCRAFT COMPANY**

33268 Central Avenue Union City, CA 94587 Tel: 510 324-3399 Fax: 510 324-3366 www.accucraft.com Copyright 2007






#### **GENERAL INFORMATION**

Between October 1942 and September 1945 the Whitcomb Locomotive Works produced 37 type 45DE27b locomotives at their Rochelle Illinois plant. This designation, 45DE27b, indicates a 45 ton (45) diesel electric locomotive (DE) of design 27, variant b. All of these locomotives were ordered for use by the military or war related critical industries. Six 45DE27b's were built for the U.S. Navy's "District Rail Transportation Coordinator" (DRTC) located at Pearl Harbor Hawaii and were 36 inch gauge. These six locomotives joined the DRTC "pool" and although used primarily by the Navy, some were occasionally leased to the Oahu Railway and Land Company to supplement their war time operations. Following the end of World War Two four of these locomotives were assigned to the Naval Ammunition Depot, Lualualei. Hawaii and two to Naval Ammunition Station. West Loch. Hawaii. In 1948 one locomotive was sold to the Kahuku Plantation on the North Shore of Oahu. The remaining five stayed in service at Lualualei and West Loch until the end of the Navy's rail operations in 1974. Three of the now surplus locomotives were purchased by Dulien Steel Inc. of Seattle Washington and two were donated by the Navy to the Hawaiian Railway Society where they remain in operation.

The Whitcomb 45DE27b is 25 feet 6 inches long over the end sills, 9 feet wide and 11 feet 6 inches high at the cab roof. They are powered by two HBI 600 Cummins 150 HP diesel engines driving Westinghouse 189-R7 230 volt direct current generators. There is one Westinghouse 1443-A traction motor per truck with power being transmitted by side rods to the unpowered axle. Electrical control is Westinghouse. Locomotive and train brakes are Westinghouse Air Brake Co. and supplied by two Quincy 30 CFM belt driven air compressors located in the cab.

Jeff

#### WIRING DIAGRAM

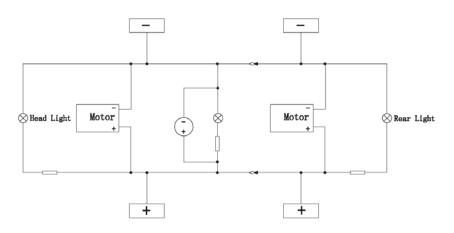

#### **OPERATION & MAINTANCE**

- The model as built and configured for DC 0-24 volt analog operation.
- · The light bulbs are 6.0 volt. diodes
- The motor will need a drop of light weight oil on each end of the motor armature shaft for every few hours of operation. Be sure to put a drop of oil on each axle bearing and a drop of oil on each crankpin main rod bearing.
- · Never over oil as this will simply make a mess and attract dirt.
- The electrical pickups will need to be cleaned periodically as will the back side of the wheels where the contacts rub.
- The body will lift off the frame by removing the hex bolts under the parameter of the cab and the hood.
- Be sure when reassembling that no wiring gets pinched causing a short circuit and damaging any electronics in the unit.
- The coupler pockets are designed to accept Kadee couplers and pins are supplied to drop in and secure the couplers.