


K-27 "Mudhen" - Snow Plow Installation

Technical Note 1.03

To install K-27 snow plow, please refer to the drawing:

1. Remove factory installed K-27 knuckle coupler by lifting the coupler pin, part #1.
2. Install coupler extension rod, part #5, to the coupler pocket, part #9.
3. Attach the snow plow connecting rods, part #2, to the front brackets with M3 nuts, part #4. Two nuts can be used to secure each rod to the bracket.
4. Slide the snow plow over the K-27 pilot, part #8. Coupler extension rod should slide through the snow plow front opening.
5. Fasten the snow plow connecting rods to the bracket located on each side of the smoke box, part #11, with four M3 nuts. Again two nuts can be used to secure each rod to the bracket.
6. Turn the K-27 engine on its side. Be sure to rest the engine on a soft surface.
7. Attach the two mounting plates to the snow plow and K-27 pilot with M3 hex-head screws, part #7.
8. Re-attach K-27 knuckle coupler to the extension rod with part #6, mounting pin.

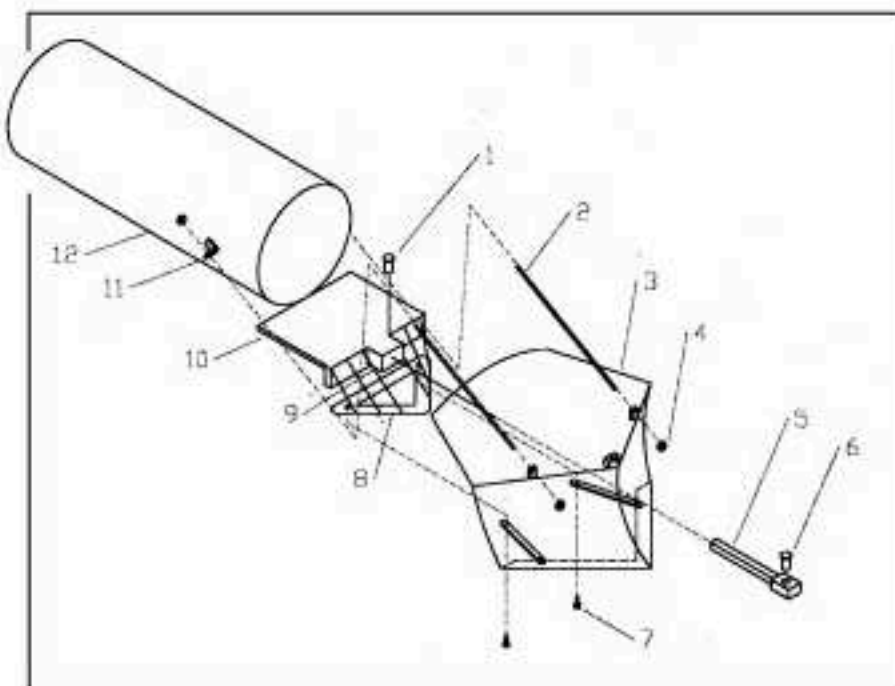

K-27 Mudhen Snow Plow Diagram