D&RGW K36 2-8-2



INSTRUCTION MANUAL





33268 Cental Avenue Union City, CA 94587 Tel: (510) 324-3399 Fax: (510) 327-3366 www.accucraft.com Copyright 2006





Prototype Information:

In 1925 the D&RGW railroad received from Baldwin Locomotive Works ten 2-8-2 locomotives numbered from #480 to #489. Their Classification would be K-36 for they had a tractive effort of approximately 36,000 pounds. These were significantly larger than the locomotives of the recently acquired K-28 class had super heaters, and were equipped with the most up to date features for steam locomotives of the era.

They were put to work in places that demanded their superior power: were well received by their crews and through the years have come to symbolize perhaps the "high water mark" of American narrow gauge motive power. In fact, many narrow gauge fans are quick to nominate the K-36 as their favorite locomotive.

Happily, except for one locomotive which was dismantled (#485), one was put on display and the rest eventually found their way to either the Durango and Silverton Narrow Gauge, or the Cumbres and Toltec Scenic Railway.

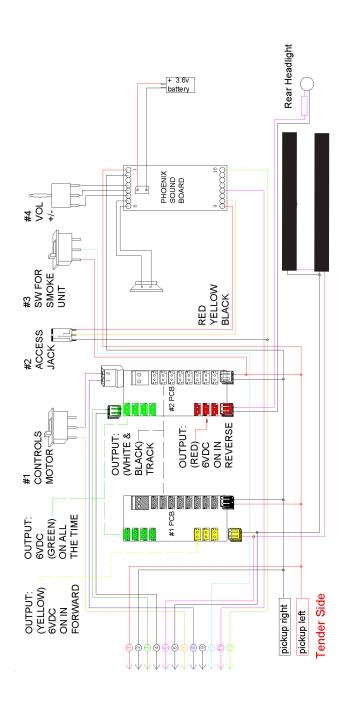

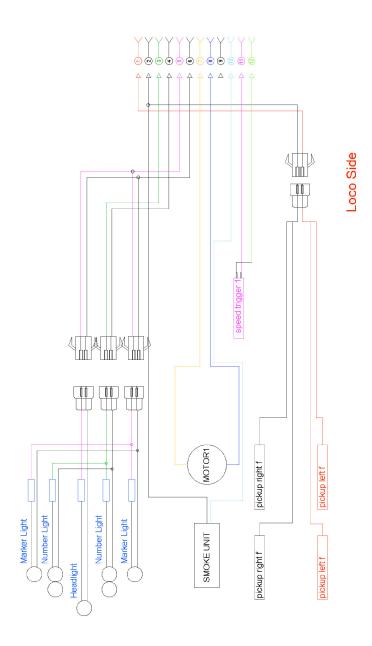

General information About the Your Accucraft K-36 Model:

This accurately detailed model is constructed of brass and stainless steel. A large Pittman gearhead motor powers all eight and the side rods. The museum quality finish and lettering represents this locomotive as it would have looked in the early 1950's. Your locomotive and tender are electrically connected via a twelve-prong plug.

This plug takes the place of the usual "wireless drawbar" that has traditionally been found on metal locomotive models. The drawbar on this model is just nut driver sized for US 00-90. what its name implies; a drawbar only. Both locomotive and tender units have carbon brush pickups on both rails to insure reliable operation when using track locomotive be picked up by power.

K-36 with comes Accucraft's new scale couplers. These operate much the same as the prototype, and they are scaled from D&RGW photos and drawings. They can be activated as on the prototype, drivers through a metal gear box from both the top and bottom of the coupler. These couplers are made of a plastic material, and will allow you to double head your K-36 with another metal locomotive without incurring any short-circuit problems.

> Disassembly of this large and complex model is not recommended. However, if absolutely necessary, the 1.6mm hex bolts can be turned with a

> Please take care in lifting this large and heavy model. is recommended that the carefully grasping it under the frame on both ends.

Technical Specifications:

Scale: 1/20.3, 45 mm Gauge

Minimum Radius: 1.2M (48 inch)*

Power: 0-24V D, Pittman gear head motor

Weight: 28.5 lbs (12.94kg)

Locomotive Information:

Length: 26 inches (660.4 mm)
Width: 6.25 inches (158-75 mm)
Height: 8.0 inches (203.2 mm)

Tender Information:

Length: 16 inches (406.4 mm)
Width: 6.25 inches (158.75mm)
Height: 8 inches (203.2mm)

*Be sure to leave at least 3"clearance (measured from the inner rail) on the 46-1/4 inch radius curve to allow for overhang.

The following parts are packaged separately:


- M3 hex head screws
- o 3mm hex head screw driver
- Whistle rope

Caution!


This model is an accurate replica of the original locomotive. It has sharp and moving parts. The locomotive drive rods are stainless steel with sharp edges.

OPERATORS MUST NOT COME INTO CONTACT WITH THE MODEL WHILE IT IS BEING POWERED AT ANY TIME. UNDER NO CIRCUMSTANCES SHALL ACCUCRAFT TRAINS BE RESPONSIBLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR INJURIES ARISING IN REGARD TO ANY ACCUCRAFT PRODUCT.

3. The locomotive is firmly taped to a 1/2" wood board which is then fastened to the metal case with 4 - M6 bolts. Bolts must be removed before lifting the locomotive with wood board from the metal case.

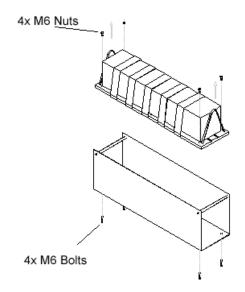


4. Place taped locomotive on a flat surface. Carefully cut the tape along the wood board side surface. Be sure to cut both sides of the wood board. Slowly lift the tape from the locomotive. Be very careful with small parts. Tape cannot be re-used to re-pack the model. Use new packing tape if necessary

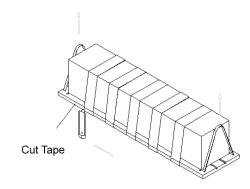


Unpacking


Accucraft Trains locomotives are fine scale brass models with small parts. To provide maximum protection from shipping damage; we carefully pack the models in metal cases. We ship via UPS with insurance coverage to its full value. Please contact UPS if the package is damaged. Each locomotive is packed under UPS guideline for shipping. We do not warrant any damage resulted from re-packaging by any party other than Accucraft Trains. Please read the following directions before unpacking your locomotive.

Remove foam around the 2. locomotive. Slide the inner box the cardboard box. cover to the side, and open the inside cardboard box by carefully cutting the tape with a cutting knife.

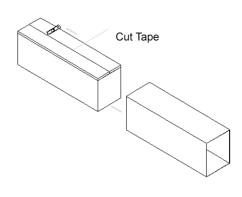

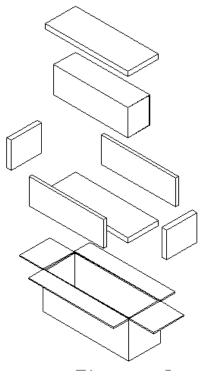

Lift the metal case from

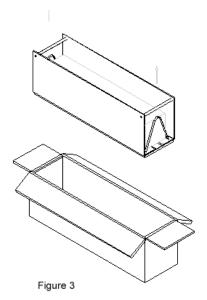

Model Features

This limited production model has been handcrafted for Accucraft Trains by AMMC, one of the most respected makers of large scale brass models. This museum quality model features:

- Full cab interior details, with operating cab windows
- Detailed boiler with fittings, domes, pipes, and handrails
- Operating steel drive rods, valve gear and cross heads
- Prototypical livery and lettering
- Scale couplers (compatible with Kadee #835)
- Steel helical gears in a die-cast transfer box

Pittman DC Gearhead Motor Specifications (GM9234)

- Peak voltage 24V
- Gear ratio 38.3:1
- Peak rated output torque 187 oz-in
- Output shaft stall torque 911 oz-in

Tools you will need for maintenance

- 1.5 mm allen wrench
- 2 mm and 3 mm hex wrenches
- Flat head screw driver
- Phillips head screw driver

Lubrication

Please lubricate your Accucraft K-36 before attempting to operate.

With a bit of care; your Accucraft K-36 should give you many years of pleasure and reliable service. Lubrication is of prime importance on a model of this type with many moving parts. Always use quality lubricants. This should not be a problem, for there are many modern lubricants available in hobby and sport shops. Light oil such as Labelle #108 or Hoppe's Gun Oil will do a good job on lubricating most of the moving parts.

For pistons and slides; a heavier lubricant such as Labelle #102 would suffice. For gears; use a type of gear grease such as Permatex Super Lube or another hobby gear lubricant.

To access the many moving parts of this model it is best to carefully place it on its side on a soft towel or foam sheet. A drop of light oil on every moving part is necessary and there are many on this locomotive. Be sure to lubricate all the crank pins, crosshead slides, piston rods,

etc. that are visible to you. Be sure to lubricate the tender axle journals as well.

Do not over lubricate for excess oil only picks up unwanted dirt. Be careful to keep lubrication off the painted surfaces as this will cause shiny areas.

Use a type of oil that is a bit heavier to lubricate the axle bushings and pivot points of the lead and trailing trucks. The main gear box is lubricated in the factory, and will not need any attention when you first run your model. However, in time you should make sure that the gears are well lubricated with technical gear grease. The gear box cover is held on with screws, and removing it will allow you to access all the gears and bushings that need lubrication.

Take note of how the cover came off and replace it exactly the way it was when you started. Lubrication of the locomotive should be done every 25 hours of operation.

After following the recommended lubrication procedures your D&RGW K-36 is now ready to provide many years of reliable operation. We recommend that

you use a D.C power supply with a capacity of 2.5 amps or larger. Always pick your model up by carefully grasping it under the frame on both ends. It is a very heavy model so make sure that you grasp it firmly.

Electrical Pickup

The D&RGW K-36 model is powered by the DC voltage off the track through the engine and the tender. All wheels are insulated on the both side of the locomotive, and the electricity is picked up with 12 pickup wheels. Be sure to clean electrical pickup units before each operation. Replacement electrical pickup units can be ordered from Accucraft Trains. Track power is connected to the Accucraft Train's power distribution board which is located in the tender.

Sound Installation (if not factory installed)

Several manufacturers have sound systems that are acceptable for your new D&RGW K-36 locomotive. Sound system power connectors are available on the power distribution board

in the tender, and a generous speaker hole will be found in the tender floor. Please contact sound system manufacturers for installation directions.

Operation

General maintenance

Clean the exterior surfaces of your locomotive with a clean, soft and lint free cloth.

IMPORTANT

Please read the "Unpacking Accucraft Trains Locomotives" section of the enclosed instruction manual before attempting to remove your model from the steel shipping case. Also, some parts may have loosened during shipment. Inspect your model prior to any operation.

Please contact Accucraft Trains technical support at (510) 324-3399 with any problems.

Fax: (510) 324-3366

E-Mail:info@accucraft.com

5